 


LED Tent Lights

Set of 4 rechargeable LED lights with power bank function

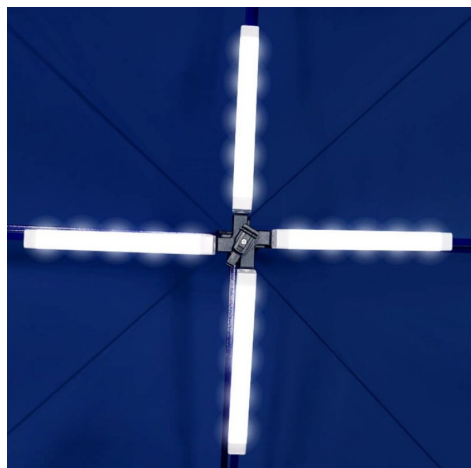

4 lights under the tent roof

Four bright LED lights with a built-in 6000 mAh battery. No socket is needed during use. You attach them to the tent frame with a magnet or a clip, and you can also use them as a power bank for your phone.


Light	300 lm, white, 3 brightness levels
Battery	Li-ion 6000 mAh, built in
Runtime	up to approx. 6 hours (depends on brightness)
Charging input	5 V / 1 A via USB
USB output	5 V / 1 A (power bank)
Body	aluminium

Package contents

- 4 LED lights with built-in battery
- 4 USB cables
- 1 charging adapter
- 8 mounting clips
- 1 carrying bag

Installation and use

- 1 Charge before first use**
Charge all lights fully with the supplied adapter and USB cables.
- 2 Mount the lights**
Attach each light to the tent frame: with the magnet on steel frames, or with the clips on aluminium frames and thin tubes. Make sure it holds firmly.
- 3 Switch on**
Press the button to switch on. Press again to change between the 3 brightness levels and to switch off.
- 4 Longer use**
If you need more than about 6 hours, connect the light to a power bank – it lights and charges at the same time.
- 5 Power bank**
Connect your phone to the USB output of the light to charge it.

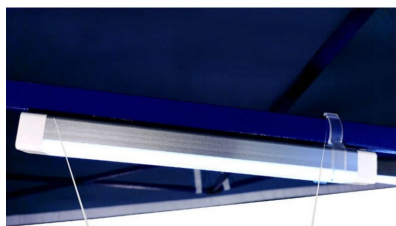

Mounting with magnet or clip



Set in carrying bag

Safety instructions

For this product

- The lights are not waterproof. Use them only under the tent roof, protected from rain, and never charge them in damp conditions.
- Charge only with the supplied adapter or a certified USB charger. Do not charge unattended or near flammable materials.
- Do not open, crush, pierce or heat the lights – the Li-ion battery can catch fire.
- Do not look directly into the light from close range.
- Do not dispose of with household waste – take to a collection point for electrical equipment.

General

- Always anchor the tent properly (weights, sand or water bags, pegs or ropes) before use.
- Take the tent and its accessories down before strong wind, storm, heavy rain, snow or hail. Never leave them installed unattended or overnight in bad weather.
- Never let rain water collect on the roof or any fabric part – remove accumulated water immediately and keep all fabric fully tensioned so water runs off.
- Keep children away during installation and do not let them play with the parts.
- Check all parts before every use and replace damaged parts. Use only original BRIMO parts.

Care and storage

- Store in the bag in a dry place at room temperature. For longer storage, recharge every 3 months.
- Clean with a dry cloth only.

The manufacturer is not liable for damage caused by wind, rain, snow, accumulated water, insufficient anchoring or by not following these instructions.